


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Fuel Can Holder Kit (p/n 1436-721 & 1436-774)

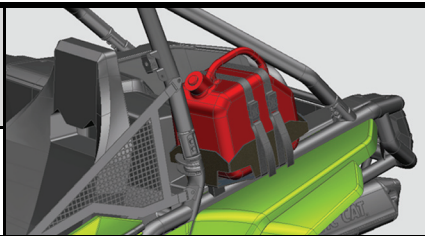


■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:


p/n	QTY	DESCRIPTION
*	2	Torx-Head Screw (M6-1 x 25) (1)
*	3	Torx-Head Screw (M6-1 x 40) (2)
*	2	Carriage Bolt (M6-1 x 20) (3)
*	1	Carriage Bolt (M6-1 x 25) (4)
*	1	Flat Washer (5)
*	3	Flange Nylon Nut (6)
*	2	Nylon Nut (7)
2241-241	1	P-Clamp (8)
0541-031	1	Frame (9)
0541-032	1	Side Bracket (10)
*	3	Spacer (11)
0541-033	2	Strap w/Buckle (12)
0541-034	2	Frame Bumper (13)
0541-035	6	Bumper Plug (14)
0453-787	1	Instruction

* Included in Hardware Kit (p/n 1436-793)

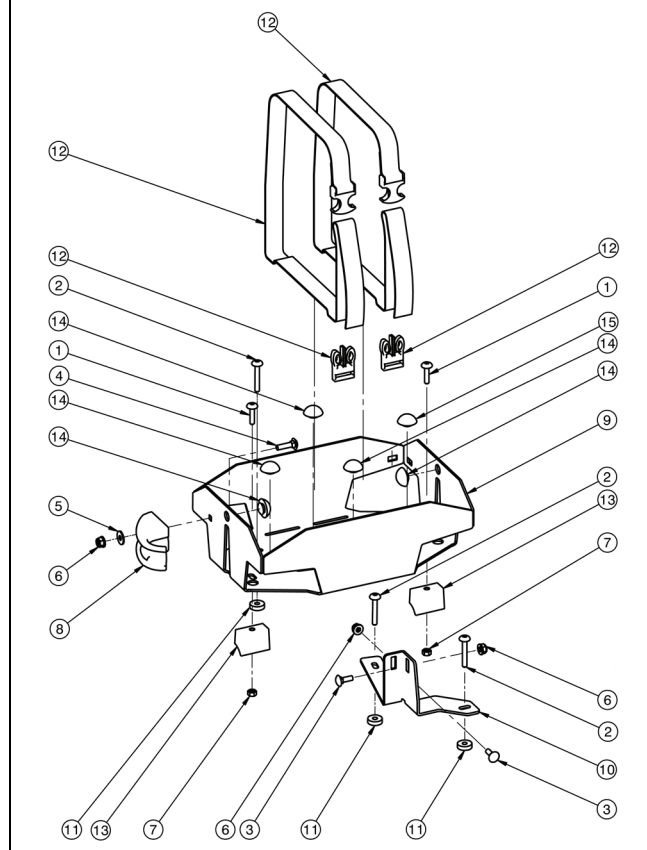

1. Loosely secure Side Bracket (A) to Frame (B) using two Carriage Bolt (M6-1 x 20) (C) and two Flange Nylon Nuts (D). See Fig. 1.


Fig. 1

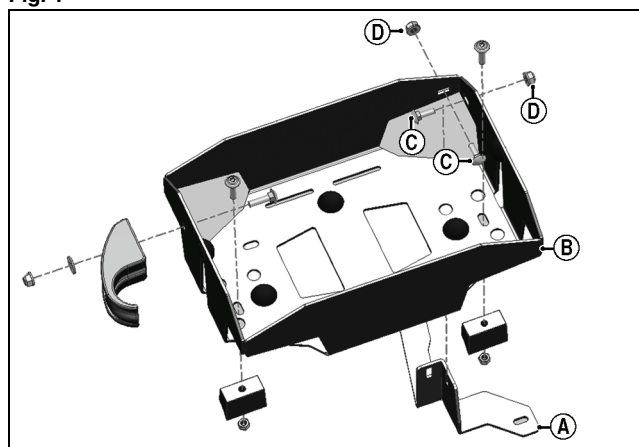

ROV-027A

2. Secure Spacer Blocks (E) to the bottom of the frame using two Torx-Head Screws (M6-1 x 25) (F) and two Nylon Nuts (G); then loosely secure P-Clamp (H) to the frame using one Carriage Bolt (M6-1 x 25) (I), one Flat Washer (J), and one Flange Nylon Nut (K). See Fig. 2.


Fig. 2

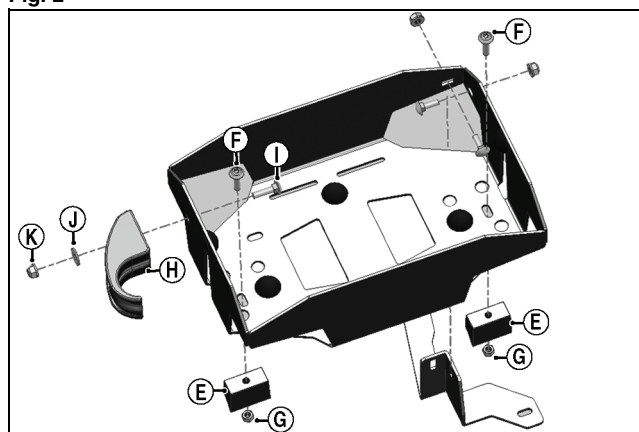

ROV-027B


3. Install both Straps through the bottom of the Frame; then install Buckle onto the Strap. See Fig. 3 and 4.

Fig. 3

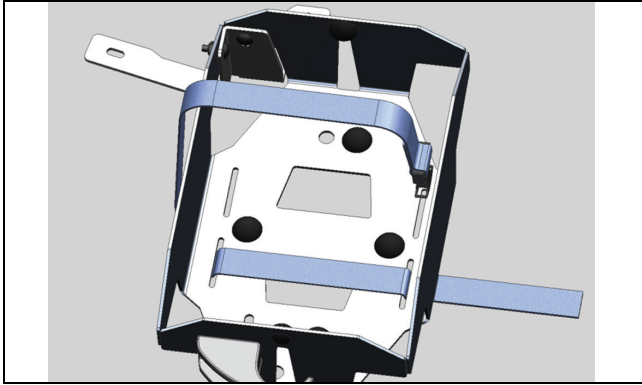

ROV-032


Fig. 4

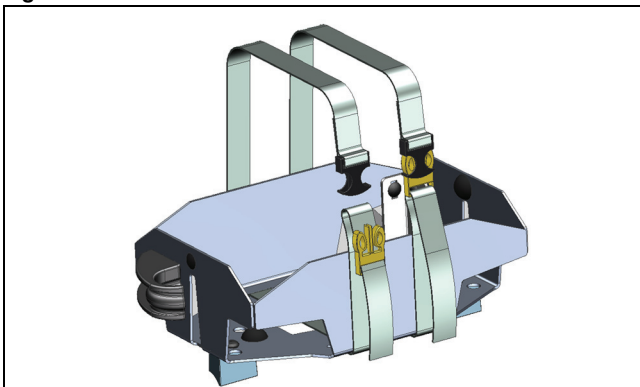

ROV-033

4. Remove the two torx-head screws and nuts securing the left rear fender; then remove the torx head screw securing the rear facia to the storage box. See Fig. 5.


Fig. 5

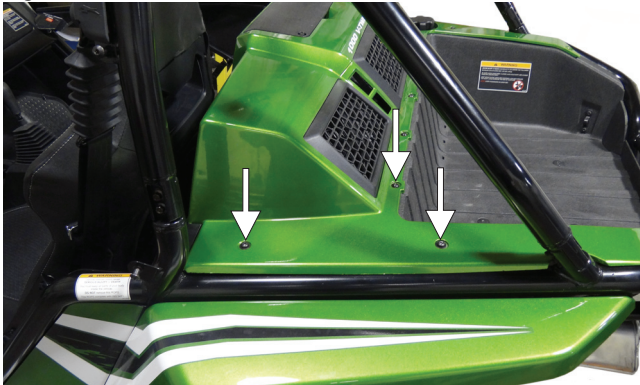

ROV-057A

5. Secure the assembly to the vehicle using three Torx-Head Screws (M6-1 x 40), three Bumpers (mounted between the assembly at the vehicle fenders), three existing flat washers and the existing three nuts. See Fig. 6.

Fig. 6

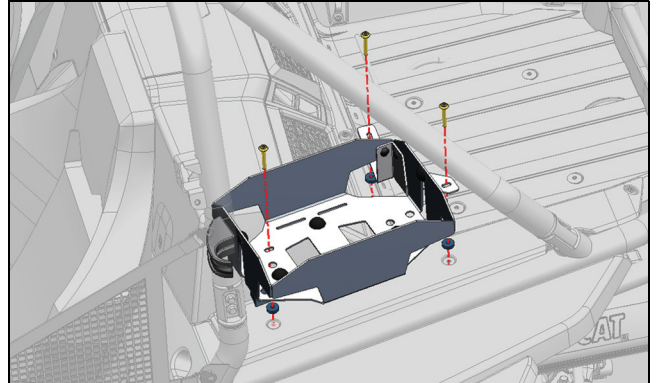

ROV-030

6. Secure the P-Clamp around the ROPS tube.

