


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Full Windshield Kit (1436-734)

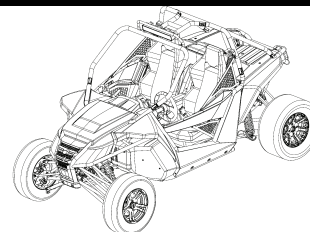

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:


p/n	QTY	DESCRIPTION
N/A	1	Windshield
*	8	Torx-Head Screw
*	8	Lock Washer
*	8	Flat Washer
*	8	Rubber Washer
0541-021	8	C-Clamp
0541-022	1	Bottom Trim
0453-767	1	Instructions

*Included in Hardware Kit (p/n 1436-773)

1. Position Bottom Trim onto the bottom of Windshield; then position eight C-Clamps onto the front ROPS tubes.

2. Secure the windshield to the C-clamps using eight torx-head screws, eight lock washers, eight flat washers, and eight rubber washers. Tighten until snug. See Fig. 1.

Fig. 1

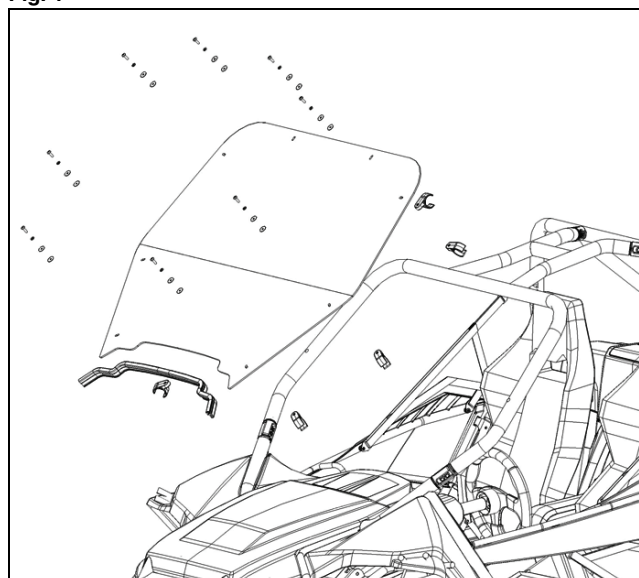

ROV-054A

■ **NOTE:** The rubber washer should be installed against the windshield.

