


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Half Windshield Kit (1436-740)

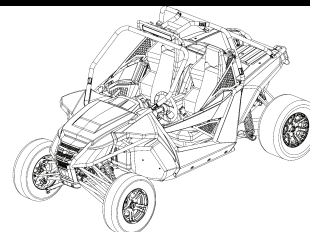

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:


p/n	QTY	DESCRIPTION
N/A	1	Half Windshield
*	4	Torx-Head Screw
*	4	Lock Washer
*	4	Flat Washer
*	4	Rubber Washer
0541-021	4	C-Clamps
0541-022	1	Bottom Trim
0453-769	1	Instructions

*Included in Hardware Kit (p/n 1436-773)

1. Position Bottom Trim onto the bottom of Half Windshield; then position four C-Clamps onto the front ROPS tubes.

2. Secure the windshield to the C-clamps using four torx-head screws, four lock washers, four flat washers, and four rubber washers. Tighten until snug. See Fig. 1.

Fig. 1

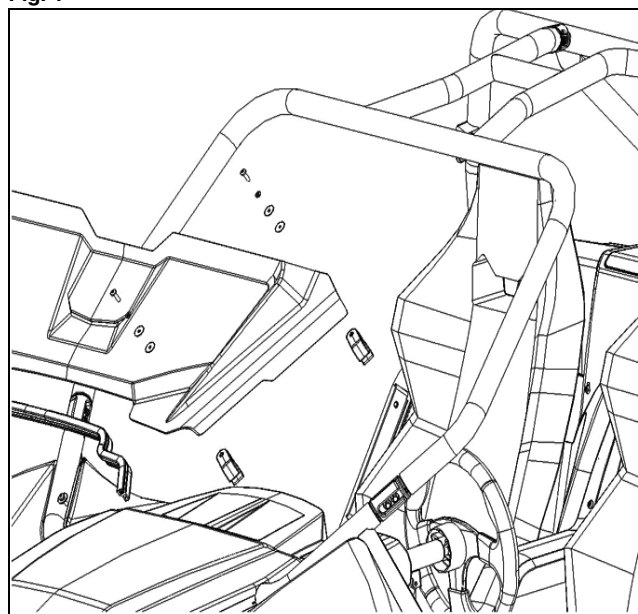

ROV-054A

■ **NOTE:** The rubber washer should be installed against the windshield.

