


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Hard Top Kit

(p/n 1436-753)

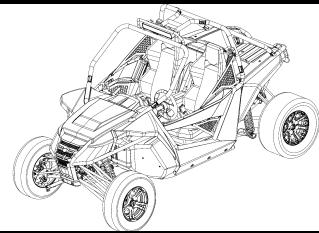

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Hard Top
*	6	Button Torx Screw
*	1	Button Torx Screw
*	7	Flat Washer
*	7	Lock Washer
2441-294	1	Flag Bracket
2441-296	1	Foam Strip Kit
2441-241	6	C-Clamp
0453-806	1	Instructions

* Included in Hardware Kit (p/n 2441-295)

- Secure Flag Bracket Extension to the existing flat bracket using Button Torx Screw, Lock Washer, Flat Washer, and Nut. Tighten securely. See Fig. 1.


Fig. 1

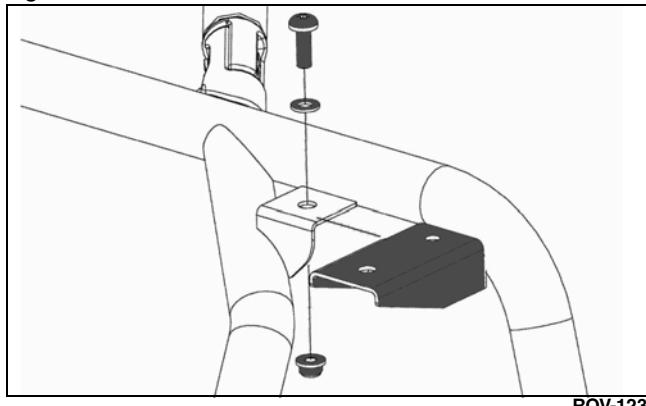

ROV-126

- Apply Foam Strips to the underside of Hard Top in the locations below which will rest on the front, rear, and center ROPS tubes. See Fig. 2


Fig. 2

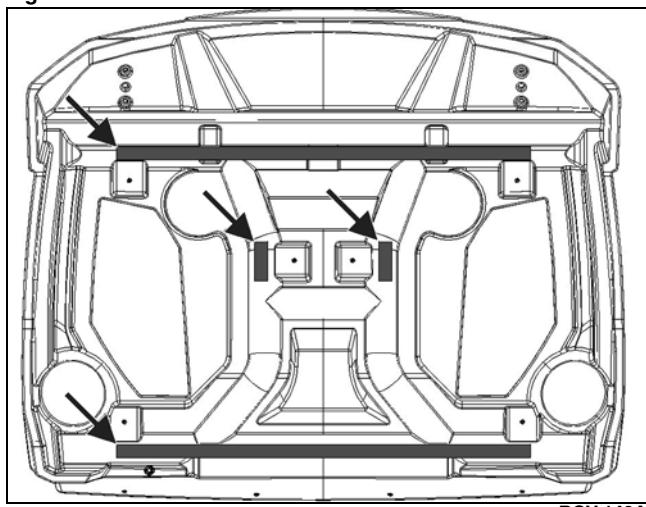

ROV-148A

- Place hard top on the ROPS. See Fig. 3.


Fig. 3

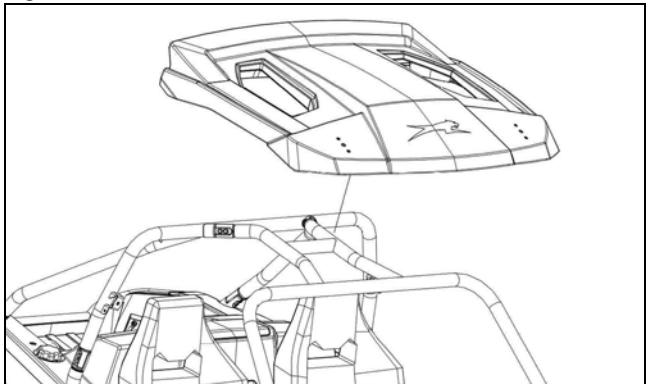

ROV-126

- Secure the hard top to the ROPS using six C-Clamps, six Button Head Screws, six Lock Washers, and six Flat Washers. Tighten securely. See Fig. 4.

Fig. 4

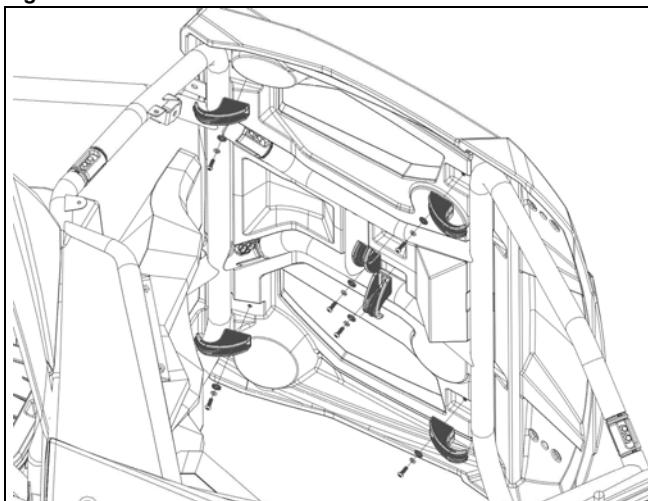

ROV-124