


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Kickpanel Bag Kit (1436-736)

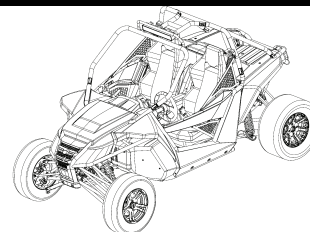

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	2	Kickpanel Bag
0453-775	1	Instructions

1. Remove the two cap screws securing the floor to the frame. See Fig. 1.

Fig. 1

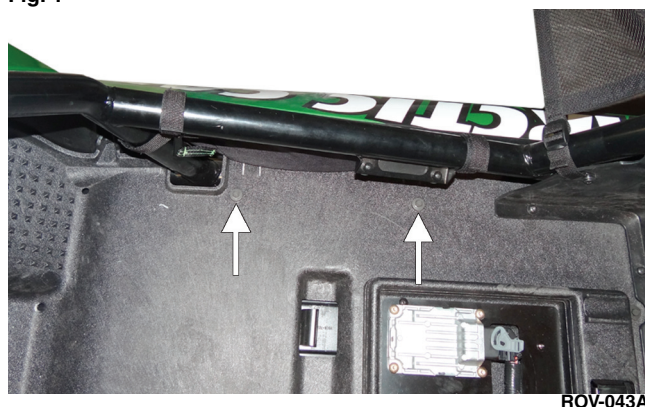

ROV-043A

2. Secure Kickpanel Bag to the floor using the cap screws removed in step 1; then secure the kickpanel bag to the side tubes using the velcro straps. See Fig. 2.

Fig. 2



ROV-044

3. Repeat for opposite side.

