


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

LoPro Windshield Kit

(p/n 1436-664)

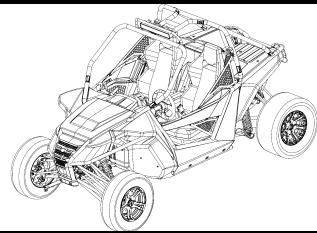

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
0541-873	1	Left-Side Windshield
0541-872	1	Right-Side Windshield
0541-874	2	Velcro Strap
0541-875	4	Self-Tapping Screw
0453-875	1	Instructions

1. Align Left-Side Windshield with the front left ROPS tube and the dash/hood; then hook the bottom lip of the windshield under the hood (A). See Fig. 1.


Fig. 1



ROV-244A

2. Install Velcro Strap to the windshield and wrap around the ROPS tube to secure in place.
3. Once desired alignment is reached, install two Self-Tapping Screws at location (B). See Fig. 2.

Fig. 2

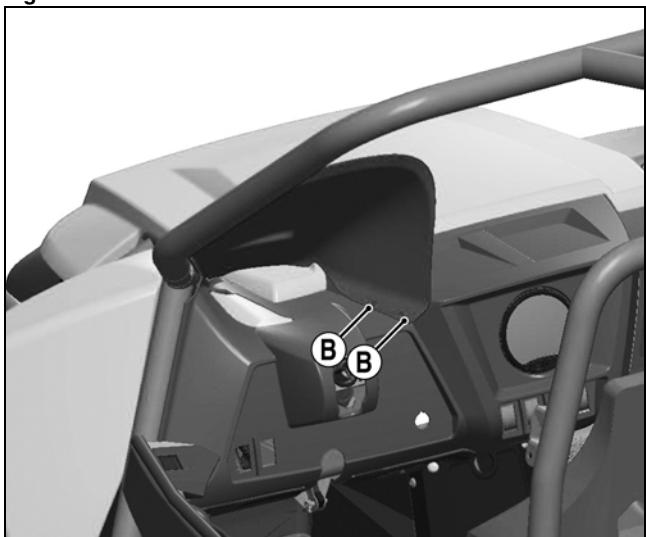

ROV-245A

4. Repeat steps 1-3 for the opposite side.

