

Arctic Cat® Prowler

Installation Instructions - Accessory Kit

Manual Windshield Wiper Kit

(1436-582)



■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Windshield Wiper Assembly
0453-809	1	Instructions

1. On glass windshields, use holes provided or if custom location, drill the steel in the desired location with a 7/16 drill bit.


■ **NOTE: Do not drill through glass or damage will occur.**

2. On poly carbonate windshields, determine the desired location; then drill using a 7/16 drill bit.

■ **NOTE: Poly carbonate windshields have a scratch resistant coating. Caution should be taken when wiping mud or abrasive material off windshield as it will affect coating over time.**

3. Secure Windshield Wiper using the illustration shown below. See Fig. 1.

Fig. 1

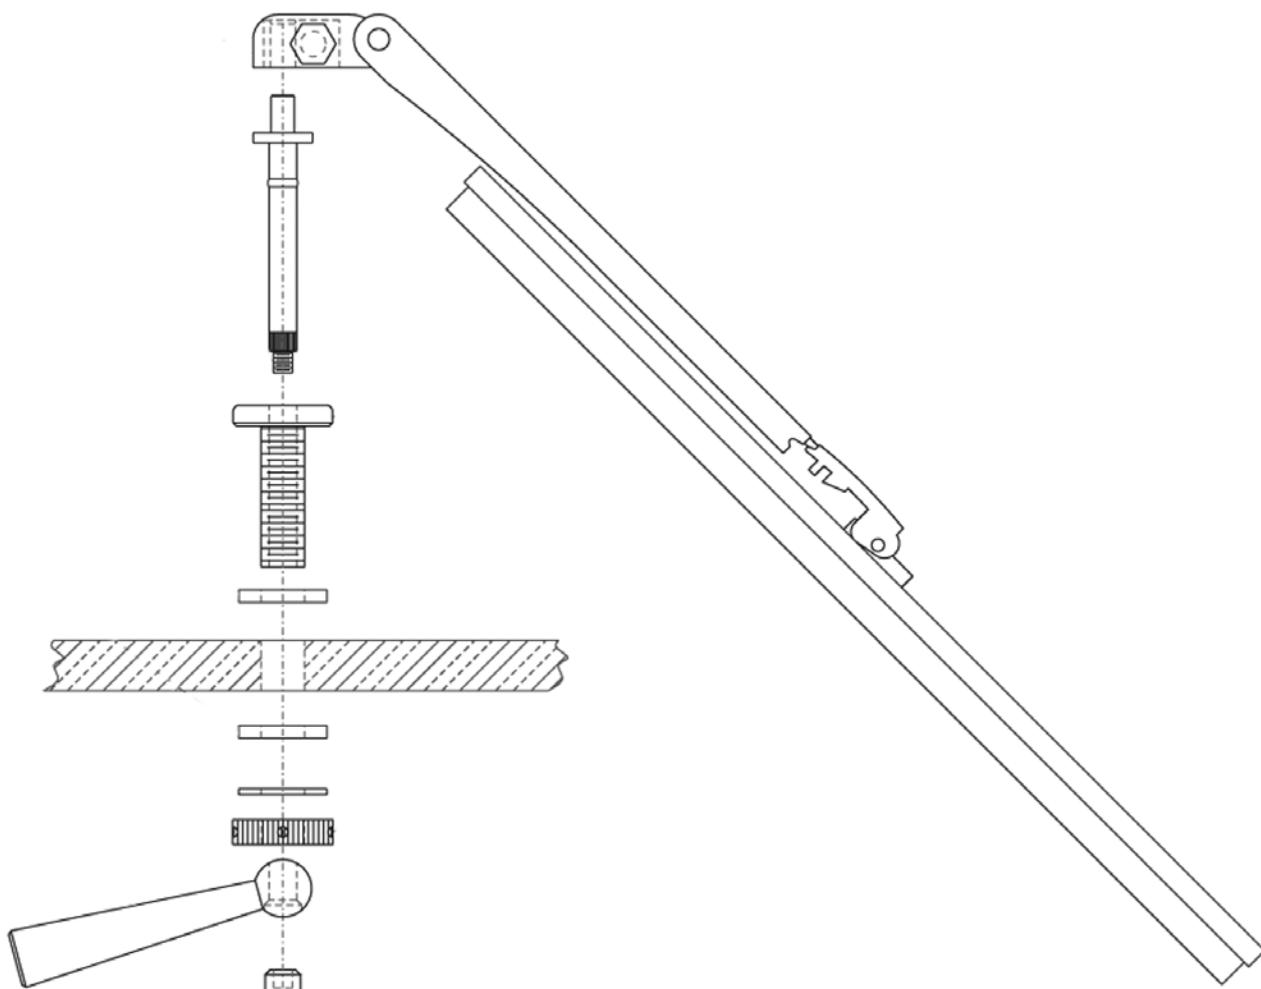

ROV-133