


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Overhead Bag Kit (1436-735)

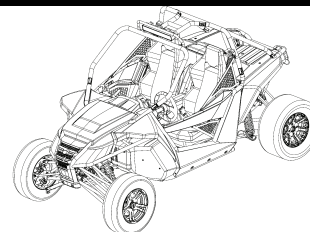

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

■ **NOTE:** Maximum carrying capacity is 2 lbs.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Overhead Bag
0453-776	1	Instructions

1. Place Overhead Bag over the top ROPS tube.
2. Connect the velcro straps around each tube. See Fig. 1.

Fig. 1



ROV-044

