

Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Passenger Powergrip Kit

(p/n 1436-768)



■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Powergrip
N/A	2	Cap Screw
N/A	2	Lock Washer
N/A	2	Flat Washer
0453-807	1	Instructions

1. Remove the passenger seat.
2. Remove and discard the two torx-head screws securing the floor. See Fig. 1.

Fig. 1

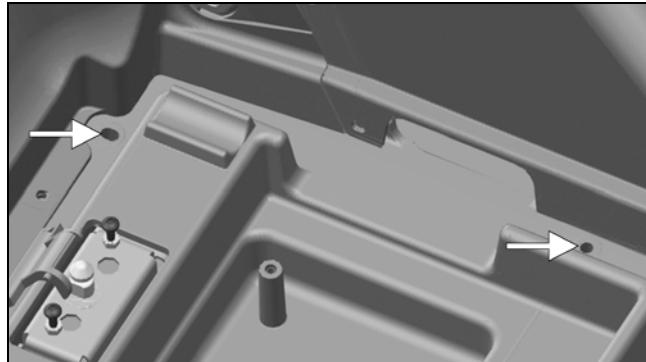


ROV-141A

3. Install Powergrip under the main harness and position the two mounting locations with the holes from step 1.

CAUTION

Do not install the powergrip over the main wire harness or damage to the harness will occur. The wire harness should be routed over the powergrip mounting plate (A) in the location shown below. See Fig. 2.

Fig. 2

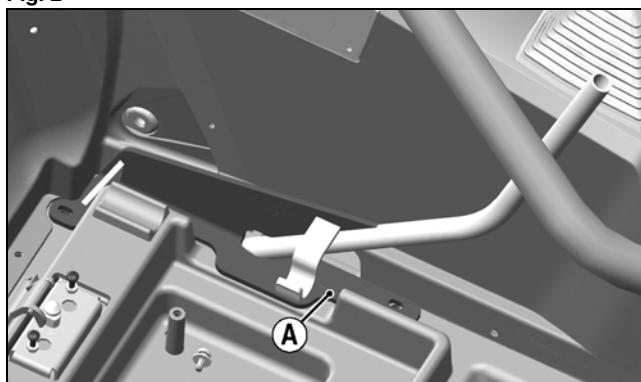

ROV-147A

4. Secure the powergrip to the vehicle using two New Cap Screws, two Lock Washers, and two Flat Washers. Tighten to 70 in.-lb.
5. Install the passenger seat.

