


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Arm Guard Kit

(p/n 1436-715)

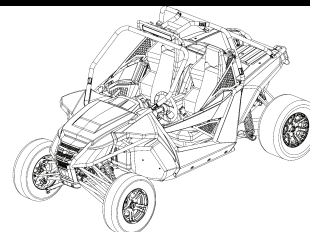

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat


Kit includes:

p/n	QTY	DESCRIPTION
0541-024	1	Right-Side Arm Guard (1)
0541-025	1	Left-Side Arm Guard (2)
*	4	U Bracket (3)
**	2	Decal (4)
***	8	Carriage Bolt (5)
***	8	Nylon Nut (6)
***	4	Flat Washer (7)
N/A	2	Foam Strip (8)
0453-786	1	Instruction

*Included in U-Bracket Kit (p/n 0541-023)


**Included in Decal Kit (p/n 0541-026)

***Included in Hardware Kit (p/n 1436-775)

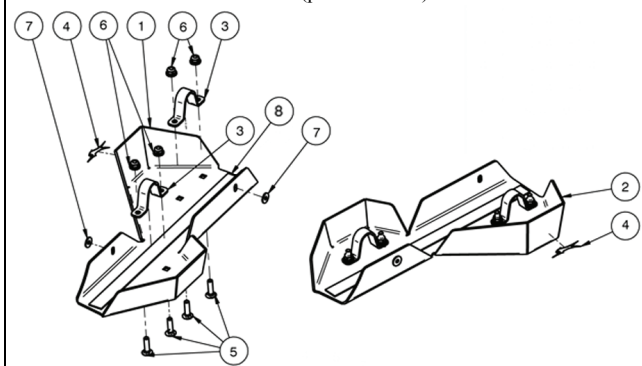

1. Install Foam Strips where the rear arms will contact the Rear Arm Guards.
2. Remove all hardware securing the existing left- and right-side rear arm guards. Retain all four cap screws.
3. Secure new Left-Side Arm Guard using the existing cap screws and two new Flat Washers. Finger tighten only at this time. See Fig. 1.


Fig. 1

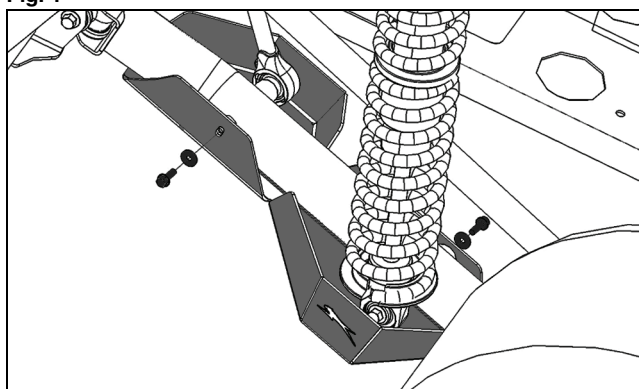

ROV-022

4. Install U-Brackets and secure using four Carriage Bolts and four Nylon Nuts. See Fig. 2.

Fig. 2

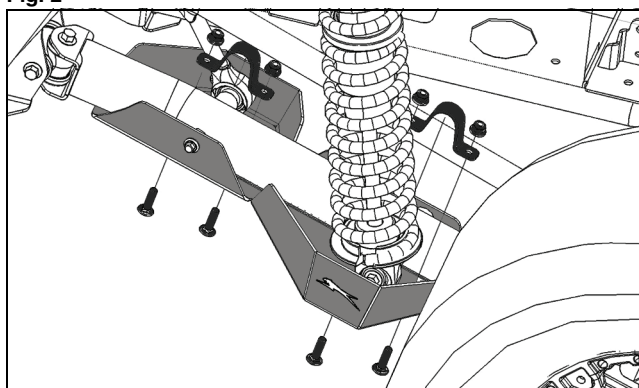

ROV-023

5. Tighten all hardware securely; then install Decal to the guard.
6. Repeat for opposite side.

