


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Fender Extension Kit

(p/n 1436-682)

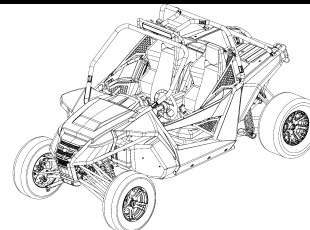

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat


Kit includes:

p/n	QTY	DESCRIPTION
0541-877	1	Left-Side Rear Fender Extension
0541-876	1	Right-Side Rear Fender Extension
*	2	Clamp
*	8	Push Dart
*	4	Screw
*	4	Nut
0453-873	1	Instructions

* Included in Hardware Kit (p/n 0541-878)

1. Align Right-Side Rear Fender Extension with the existing rear fender. See Fig. 1.
2. Mark all four holes on the inside of the existing rear fender; then using a 21/64-in. drill bit, drill all four mounting locations.
3. Secure the fender extension to the existing fender using four Push Darts (A) in the holes from step 2. See Fig. 1.
4. Install Clamp around the frame tube in the location shown below; then secure the clamp to the fender extension using two Screws and two Nuts. Tighten securely. See Fig. 1.
5. Repeat steps 1-4 for the opposite side.

Fig. 1

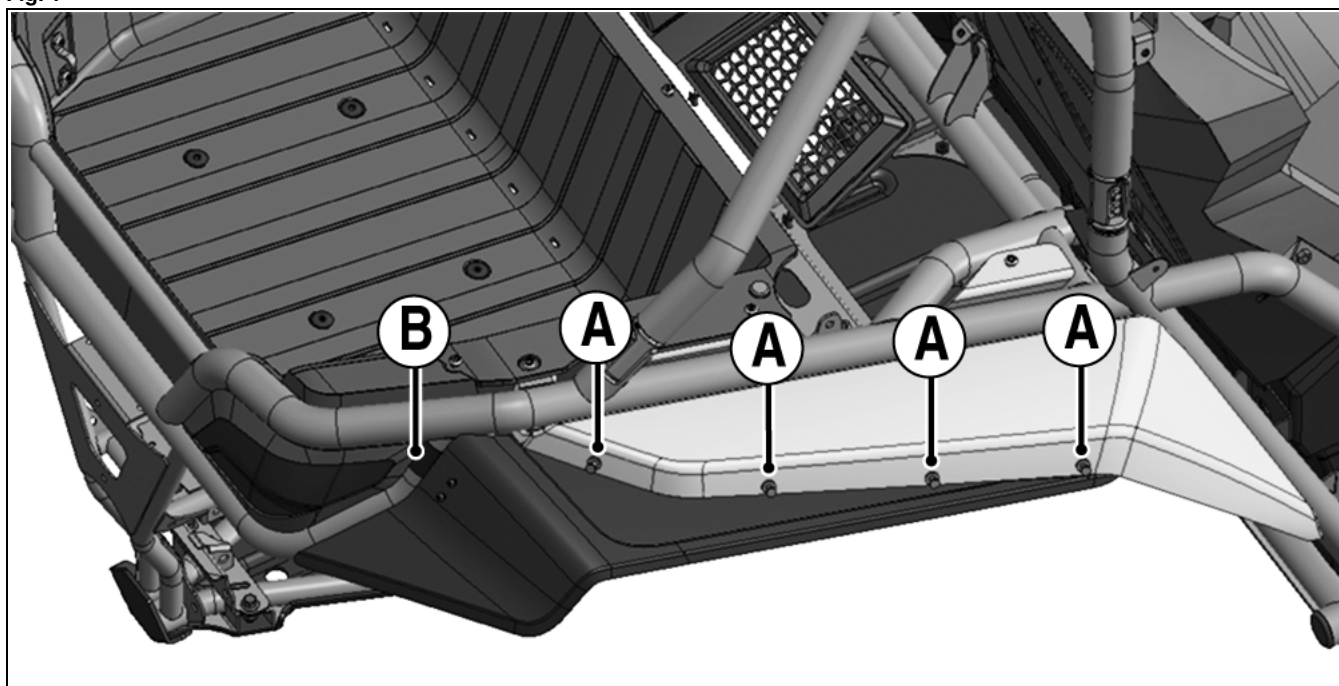

ROV-242A

