


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Panel Kit (p/n 1436-771)

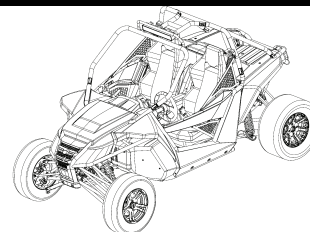

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Panel
0453-789	1	Instructions

1. Feed the velcro strap around the rear of the ROPS tube and connect the velcro straps. See Fig. 1.

Fig. 1



ROV-058

2. Feed and connect the velcro underneath the top safety net bracket; then feed the buckle strap around the bottom safety net bracket; then connect the buckles and cinch tight. See Fig. 2.

Fig. 2



ROV-059

3. Repeat steps 1 and 2 for opposite side.
4. Note where the self-adhesive velcro is to attach between the driver and passenger seat. Clean area with isopropyl rubbing alcohol and allow to dry. Peel backing of self-adhesive velcro and adhere. Maximum velcro adhesion will occur in 24hrs. at room temperature. See Fig. 3.

Fig. 3.



ROV-060

