


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Panel Kit

(1436-825/828)

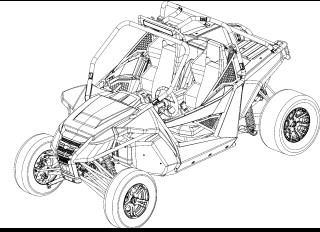

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:

Ref. No.	p/n	QTY	DESCRIPTION
----------	-----	-----	-------------


Ref. No.	p/n	QTY	DESCRIPTION
1	*	6	Button Torx Screw
2.	*	6	Flange Nut
3	N/A	1	Rear Panel
4	0541-888	1	Rubber Trim
5	0541-885	2	Plastic Vent
6	0541-886	2	Vent Cover
7	0541-884	2	Upper Bracket (Included in kit 1436-825)
8	2441-241	1	C-Clamp
9	*	6	Rubber Washer
10	*	6	Fender Washer
N/A	0453-879	1	Instruction

* Included in Hardware Kit (p/n 0541-887)

Parts illustration is on the back of this instruction

1. If a Hard Top (p/n 1436-753) is installed, remove the two screws and clamps securing the rear portion of the roof. See Fig. 1.


Fig. 1

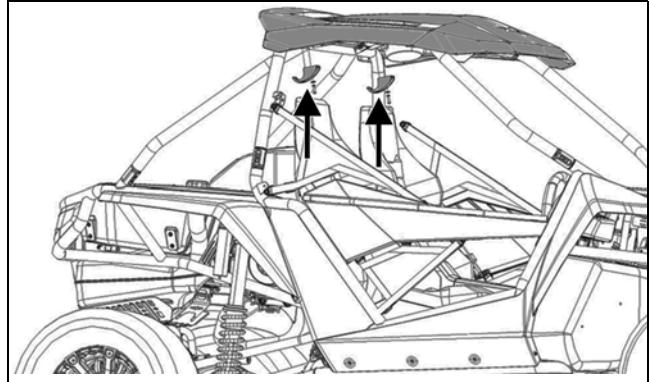

ROV-250A

2. If you have a hard roof, drill both half-drilled holes in Rear Panel using a 5/16-in. drill bit. See Fig. 2.


Fig. 2

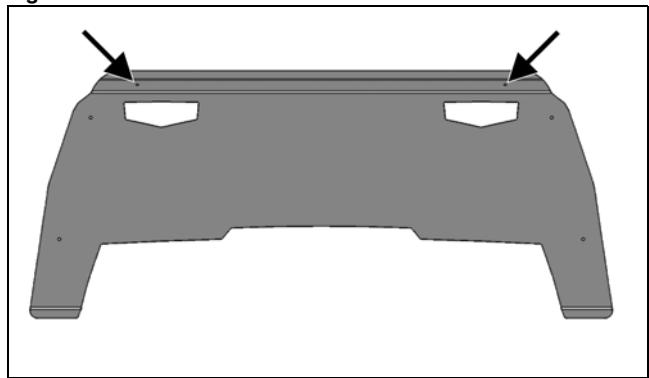

ROV-251A

3. On Wildcat models, install Trim onto the rear panel making sure the trim joint is approximately 2.5 inches from the upper rear right mounting hole. See Fig. 3.

Fig. 3

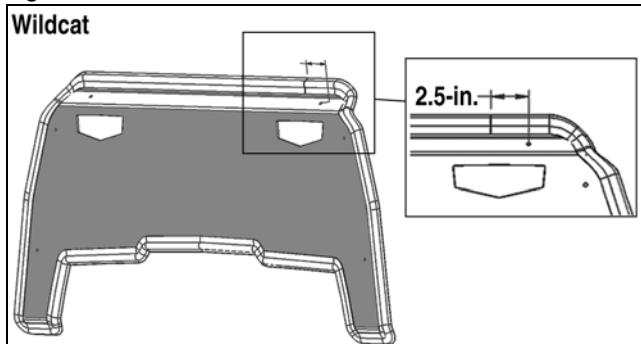


ROV-252A

- **NOTE:** The lip of the trim should point to the front of the vehicle.

4. On Wildcat 4 models, install Trim onto the rear panel making sure the trim joint is approximately 8 inches from the upper rear right mounting hole. See Fig. 4.


Fig. 4

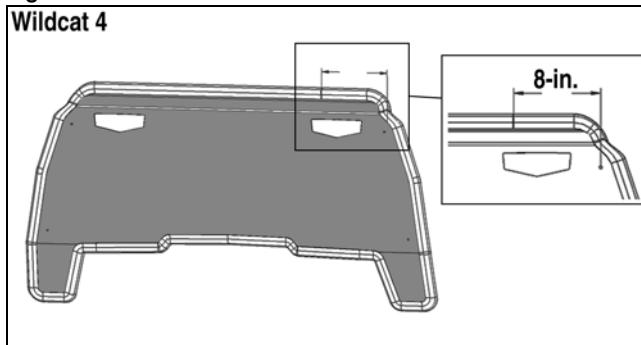

ROV-257A

5. Install Rubber Vent into the rear panel by compressing the rubber part into the hole in the panel. The plastic vent cover must point to the front of the vehicle. See Fig. 5.


Fig. 5

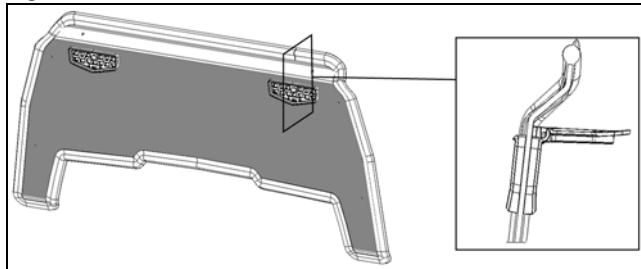

ROV-253A


6. Position the rear panel by installing the top portion of the panel first, then the bottom. See Fig. 6.

Fig. 6

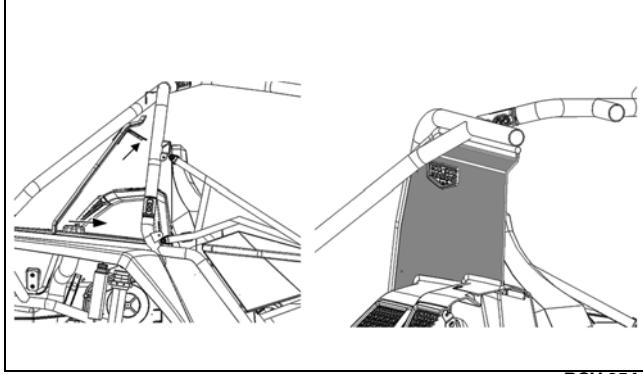

8. If a Hard Top (p/n 1436-753) is installed, secure the rear panel to the roof using two Upper Brackets, four screws, four flat washer, four rubber washers, and four nuts. Do not over-tighten. See Fig. 8.


Fig. 8

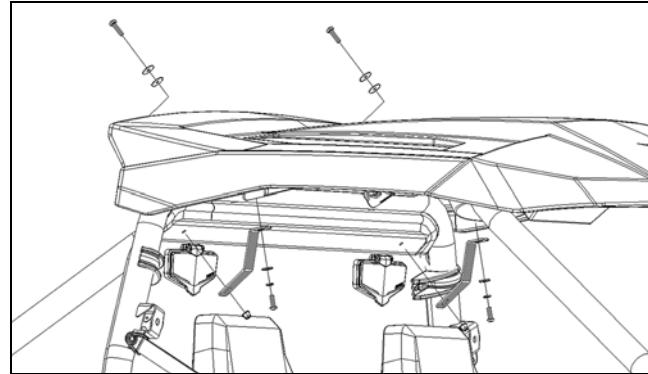

ROV-256

7. Secure the rear panel to the vehicle using four Clamps, four Screws, four Flat Washer, four Rubber Washers, and four nuts. Do not over-tighten. See Fig. 7.

Fig. 7

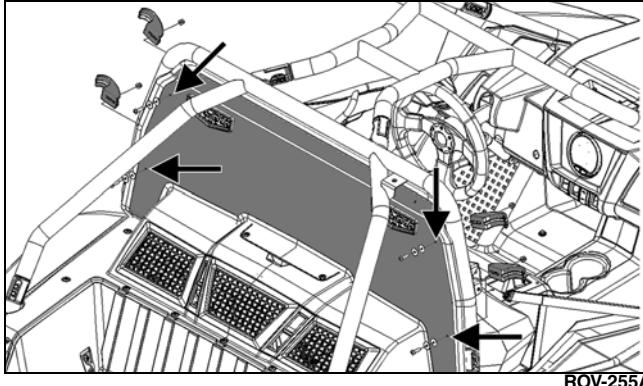

ROV-255A

Parts Illustration

