


Arctic Cat® Wildcat 4

Installation Instructions - Accessory Kit

Rear Panel Kit

(p/n 1436-839)

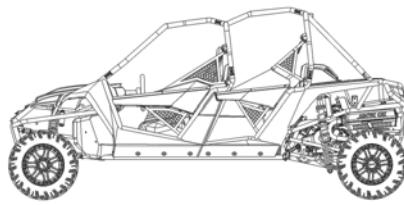

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: Wildcat 4

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Panel
0453-885	1	Instructions

1. Feed the velcro strap around the rear of the ROPS tube and connect the velcro straps. See Fig. 1.
2. Feed and connect the velcro underneath the top safety net bracket; then feed the buckle strap around the bottom safety net bracket; then connect the buckles and cinch tight. See Fig. 1.

Fig. 1

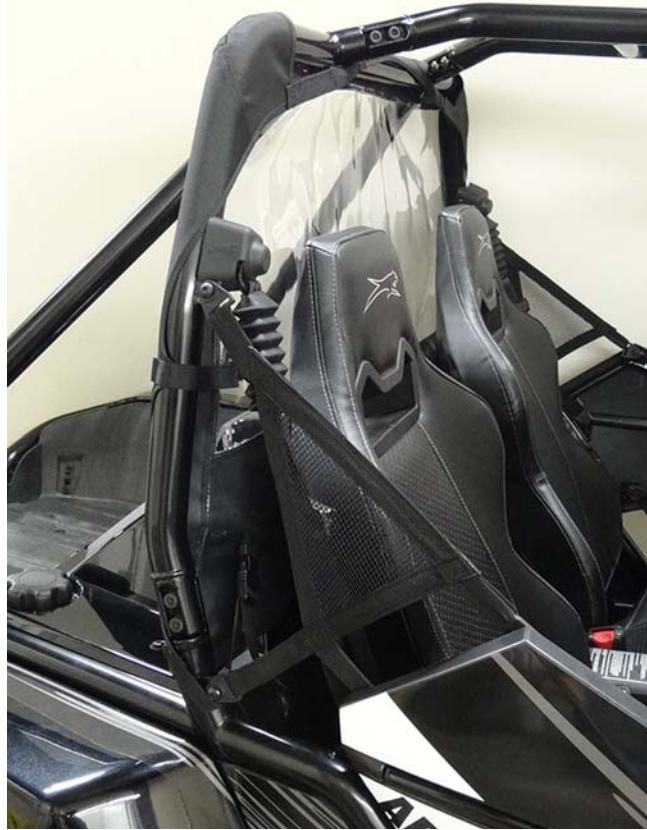

ROV-244

3. Repeat steps 1 and 2 for opposite side.

4. Note where the self-adhesive velcro is to attach between the driver and passenger seat. Clean area with isopropyl rubbing alcohol and allow to dry. Peel backing of self-adhesive velcro and adhere. Maximum velcro adhesion will occur in 24hrs. at room temperature. See Fig. 2.

Fig. 2



ROV-060

