


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Storage Bag Kit (p/n 1436-737)

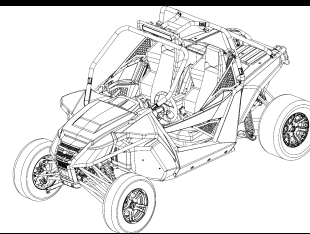

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Storage Bag
0453-796	1	Instructions


1. Place the bag in the cargo box of the Wildcat.
2. Open the lid and note where the holes in the corners of the bag align with the metal loops in the box.
3. Attach the hooks to the metal loops and cinch. See Fig. 1 and 2.

Fig. 1



ROV-069

Fig. 2

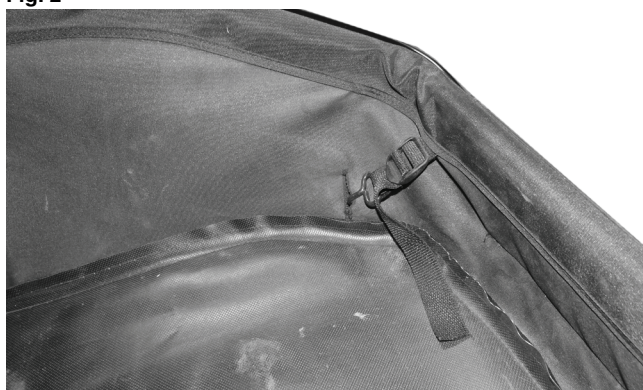

ROV-068

4. Insert the stiffener flap between the top rear center horizontal bar of the bed and the bed plastic.
5. Thread the buckle straps under rear frame tube, connect the buckles to the buckles on the lid and cinch. See Fig. 3.

Fig. 3



ROV-067

■ **NOTE:** Do not carry sharp or pointed objects in the storage bag.

■ **NOTE:** The lid of the bag has a magnet that will connect to the vertical ROPS tube. This will aid in holding the lid in the opened position.

