


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Rear Winch Receiver Kit

(p/n 1436-741)

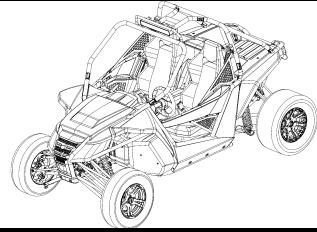

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
*	2	M10 Carriage Bolt
*	1	Black Cap Screw (M8-1.25 x 25)
*	2	Cap Screw (M8-1.25 x 55)
*	2	Zinc Cap Screw (M8-1.25 x 25)
*	2	M10 Nut
*	5	M8 Nut
*	1	Flat Washer
0541-037	1	Mounting Plate
N/A	1	Rear Receiver
0453-763	1	Instructions


* Included in Hardware Kit (p/n 1436-792)

ATTENTION

This accessory component is one kit of the Wildcat Winch System. This system includes a Winch Receiver(s), Winch Carrier, Winch Transport Mount, and Winch. This component is intended only to be used as part of this Winch System only.

1. Position Mounting Plate on the inside of the vertical rear frame tubes and secure to the frame using two Zinc Cap Screws (M8-1.25 x 25) and two M8 Nuts. Tighten securely. See Fig. 1.


Fig. 1

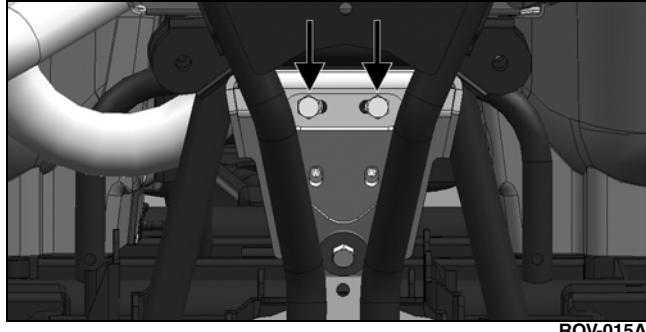

ROV-015A

2. Remove the torx-head screw securing the rear portion of the skid plate to the frame. See Fig. 2.


Fig. 2

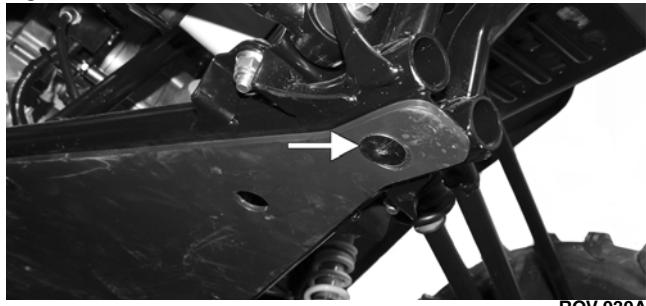

ROV-030A

3. Remove the two cap screws and nuts securing the bracket shown below. See Fig. 3.


Fig. 3

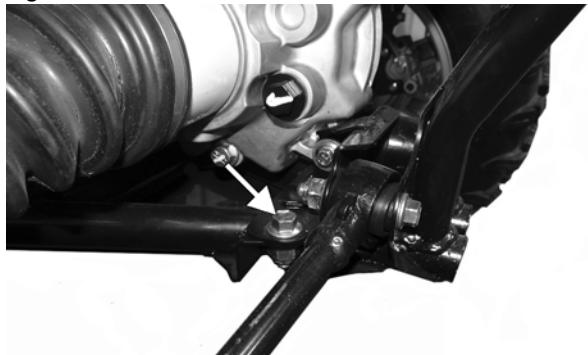

ROV-031A

4. Secure Rear Receiver to the frame and the mounting bracket using two M10 Carriage Bolts (A), two M10 Nuts, two Black Cap Screws (M8-1.25 x 25) and two M8 Nuts. Tighten securely. See Fig. 4.


Fig. 4

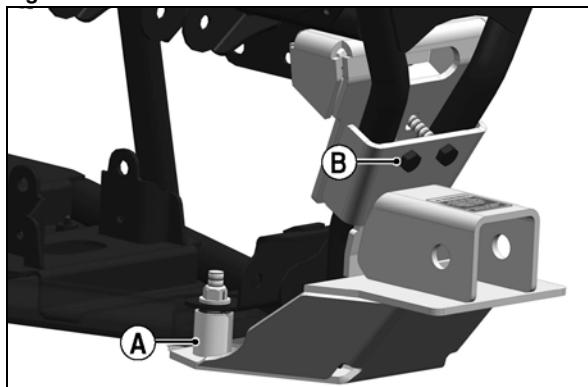

ROV-037A

5. Install the torx-head screw removed in step 2. Tighten securely. See Fig. 5.

Fig. 5

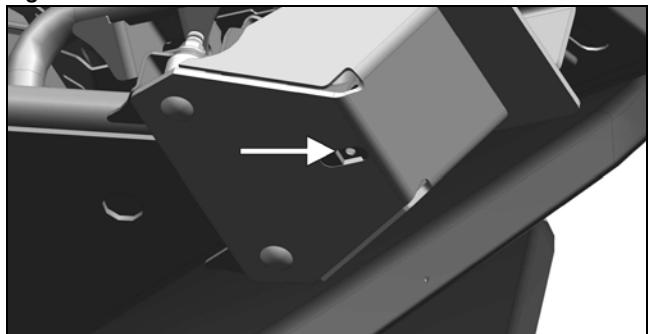

ROV-036A

Arctic Cat Wildcat Rear Winch Receiver (p/n 1436-741)

Key

1. M10 Carriage Bolt
2. Black Cap Screw (M8-1.25 x 25)
3. Cap Screw (M8-1.25 x 55)
4. Zinc Cap Screw (M8-1.25 x 25)
5. M10 Nut
6. M8 Nut
7. Rear Receiver
8. Mounting Plate
9. Flat Washer

