


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Soft Doors Kit (p/n 1436-730)

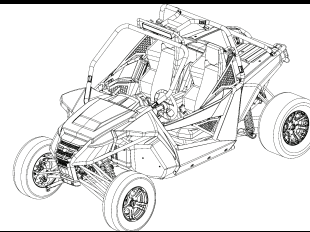

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
0541-047	1	Rear Door Bracket Kit (LH & RH)
0541-045	1	Left-Side Door
0541-044	1	Right-Side Door
*	4	Wing Nut
*	4	M6 Screws
*	2	Front Mounting Bracket (LH & RH)
0541-046	1	Seal Kit
0453-777	1	Instructions

* Included in Hardware Kit p/n 1436-797

1. Unlatch both doors; then using a flat head screw driver, remove the two plastic plugs from the end of each door (near the latch). See Fig. 1.


Fig. 1



ROV-080

2. Remove the torx-head screws from the safety net and install Door Bracket and re-install the net using the supplied Screws making sure to place the washer from the net on top of the bracket. See Fig. 2 and 3.


Fig. 2

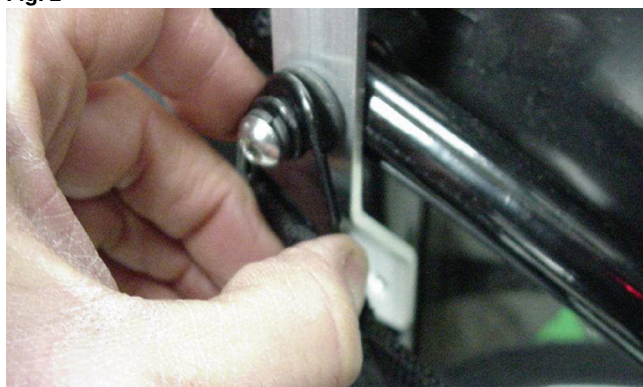

ROV-081

- **NOTE:** For determining the left and right bracket- The side with the longer space between bends is the bottom of the bracket. See Fig. 3.

Fig. 3

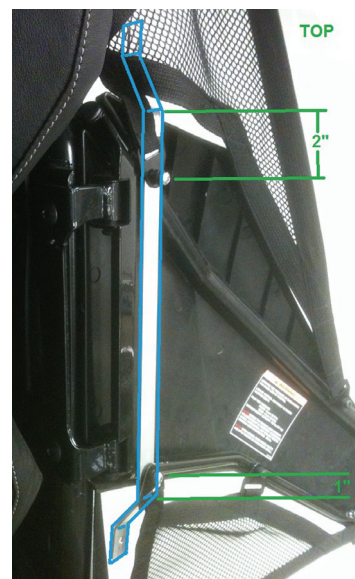

ROV-082

3. Install Right-Side Door into the end of the wildcat door (where the plug was removed). See Fig. 4.

Fig. 4



ROV-078

4. Install the rear of the door into the bracket and secure using both wing nuts. See Fig. 5 and 6.

Fig. 5



ROV-076

Fig. 6



ROV-077

Installing Seal Kit

1. Remove both torx head screws under the left-side front fender. See Fig. 7.

Fig. 7



ROV-084A

2. Remove the backing from the two adhesive strips from Fender Close-Off's and secure to the vehicle using the two screws removed in step 1. See Fig. 8.


Fig. 8



ROV-083

3. Press the adhesive strips against the vehicle to secure. Repeat for opposite side.
4. Install Steering Post Close-Off around the steering post and behind the dash. Secure using two push pins. See Fig. 9.


Fig. 9

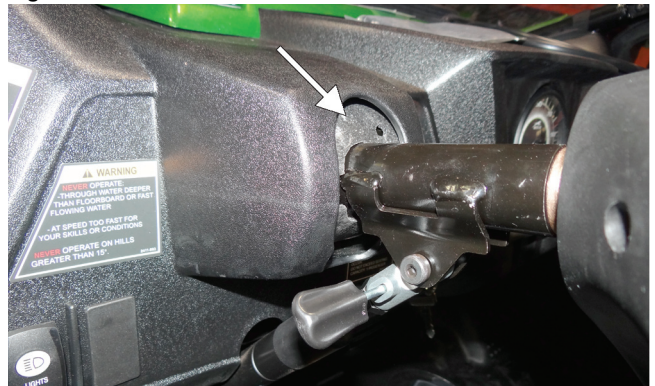

ROV-087A

5. Remove the front left strap securing the roof/back; then position one piece of seal (A) to the windshield so the seal will contact the front of the roof/back seal (B). Repeat for opposite side. See Fig. 10.

Fig. 10

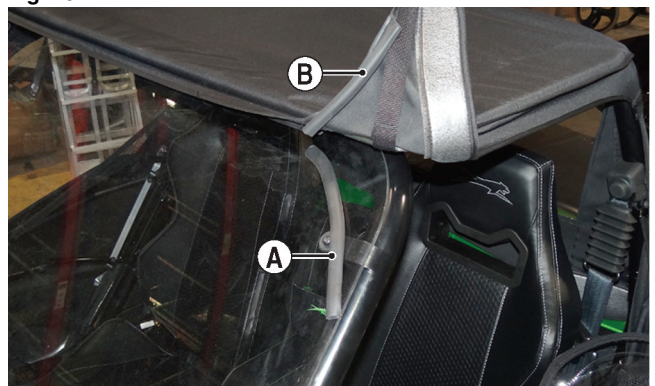

ROV-086A