


# Arctic Cat® Wildcat 4

## Installation Instructions - Accessory Kit

### Soft Roof/Back Panel Kit

(p/n 1436-674)

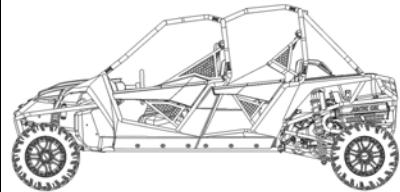

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: Wildcat 4

##### Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Roof/Back
0541-104	2	Rear Roof Support Clamp
0541-859	1	Fiber Roof Support Rod
0541-861	1	Anti-Pooling Bar
0541-891	2	Side Roof Support
0541-860	1	Windshield Windlock Channel
0123-903	2	Cable Tie
0453-883	1	Instructions

1. Install Rear Roof Support (clamps and fiber support rod) onto the top cross ROPS tubes. See Fig. 1.

Fig. 1



2. With Full Windshield (p/n 1436-734) installed, remove the two screws securing the top side clamps; then secure Windshield Windlock Channel using the two existing screws making sure the groove is installed downward. See Fig. 2.


Fig. 2



ROV-246A

3. With Flip-Up Windshield (p/n 1436-739) installed, remove the bottom two screws securing the top side clamps; then secure Windshield Windlock Channel using the two existing screws making sure the groove is installed downward. See Fig. 3.

Fig. 3

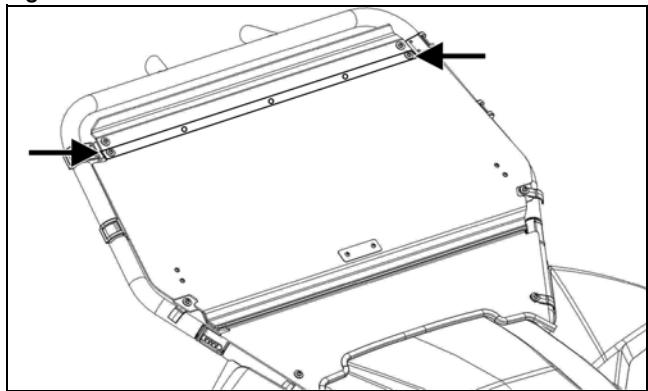

ROV-082A

4. Drill the remaining holes through the bracket and into the windshield and secure using the supplied hardware.
5. Route the front of the Roof/Back through the groove in the windshield bracket and drape over the ROPS. See Fig. 4.

**Fig. 4**



ROV-247

10. Secure the rear portion of the roof/back around the rear seat belt bracket. See Fig. 7.

**Fig. 7**



ROV-071

6. Extend Side Roof Supports until they are fully extended and locked.
7. Insert the smaller end of the support through the sides of the roof/back making sure it is seated into the rear pocket when fully installed. See Fig. 5.

**Fig. 5**



ROV-245A

8. Feed the lower webbing/velcro strap around the lower frame tube (behind the rear seat) at the weld making sure the velcro side of the strap is facing out.
9. Feed the lower velcro strap through the lower adjustable buckle of the top/back and cinch connecting the velcro. Secure the middle of the strap to the frame using a Cable Tie (A). See Fig. 6.

**Fig. 6**



ROV-251A

11. Feed the flag through the access hole if one is installed. Attach the velcro tab around the flag bracket. Connect the back panel to the top using the zipper. See Fig. 8.

**Fig. 8**



ROV-254

12. Secure the velcro around the rear ROPS tubes. See Fig. 9.

**Fig. 9**



ROV-255

13. Secure the center of the roof/back using the velcro below the front seat belt bracket. See Fig. 10.

Fig. 10



14. Secure the front of the roof/back to the front ROPS tubes using the two velcro straps making sure to route the material under the windshield. The lower velcro strap must be installed under the middle windshield clamp. See Fig. 11.

Fig. 11



15. Install Anti-Pooling Bar onto the side roof supports making sure the support snaps into place. See Fig. 12.

Fig. 12



16. Repeat for opposite side.

17. Note where the self-adhesive velcro is to be located between the two rear seats. Clean area with isopropyl rubbing alcohol and allow to dry, peel backing of the self-adhesive velcro and adhere. Maximum velcro adhesion will occur in 24 hours at room temperature. Connect the velcro on the back to the self adhesive velcro. See Fig. 13.

Fig. 13



18. Make sure the Roof/Back is centered over the vehicle and cinch all straps tight.

