


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Soft Roof/Back Panel Kit

(p/n 1436-732)

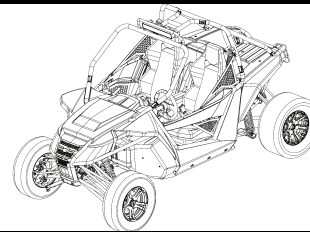

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:		
p/n	QTY	DESCRIPTION
N/A	1	Roof/Back
0453-778	1	Instructions

1. Feed the lower webbing/velcro strap around the lower frame tube at the weld making sure the velcro side of the strap is facing out. See Fig. 1.

Fig. 1



ROV-070A

2. Drape the top/back over ROPS; then feed the rear webbing/buckle strap underneath the seat belt bracket and connect the buckles. See Fig. 2.

Fig. 2



ROV-074

3. Feed the flag through the access hole if one is installed. Attach the velcro tab around the flag bracket. Connect the back panel to the top using the zipper. See Fig. 3.


Fig. 3



ROV-071

4. Feed the front webbing strap around the front ROPS tube underneath the weld (A) through the sewn loop. Feed the end of the strap back up and through the adjustable buckle (B) and cinch tight so the seam of the tube pocket follows the same line as the top edge of the windshield. Attach the velcro on the strap to the velcro on the top/back material (C). See Fig. 4.

Fig. 4

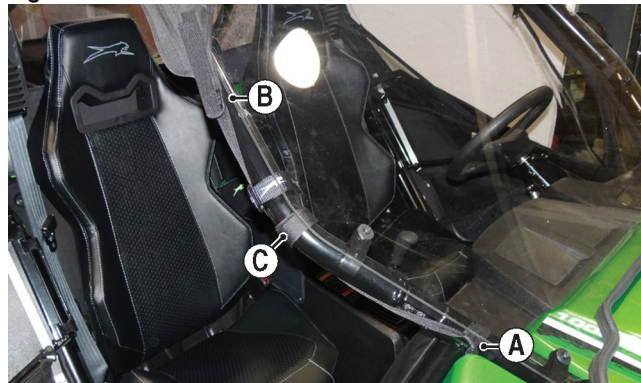

ROV-075A

5. Repeat steps 1-4 for opposite side.

6. Feed the lower velcro strap through the lower adjustable buckle of the top/back and cinch connecting the velcro. Secure the middle of the strap to the frame using a Cable Tie (A). See Fig. 5.

Fig. 5



ROV-073A

7. Note where the self-adhesive velcro is to be located between the two seats. Clean area with isopropyl rubbing alcohol and allow to dry, peel backing of the self-adhesive velcro and adhere. Maximum velcro adhesion will occur in 24 hours at room temperature. Connect the velcro on the back to the self adhesive velcro. See Fig. 6.

Fig. 6



ROV-072

8. Make sure the Roof/Back is centered over the vehicle and cinch all straps tight.

