

# Arctic Cat® Wildcat 4

## Installation Instructions - Accessory Kit

### Trailerable Cover Kit

(p/n 1436-671)



■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: Wildcat 4

##### Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Cover
0453-880	1	Instruction


■ **NOTE:** Ensure cover is adequately tensioned prior to trailering unit.

■ **NOTE:** Be sure the unit and the windshield is free from dirt and grime prior to installation of the cover. Cover installation on a dirty unit will promote scratching.

■ **NOTE:** Only trailer the unit with the cover installed facing forward

1. Make sure Vehicle is in final position and in park. (unit cannot be moved once cover is installed.) Connect the velcro near the ratchet to the velcro on the cover this will prevent the ratchet from damaging the unit when installing the cover.
2. Drape the cover over the vehicle; then pull bottom edge of cover down as far as possible all the way around the vehicle and over the tires.
3. At front of vehicle, buckle the bottom buckle straps together. See Fig. 1.


Fig. 1

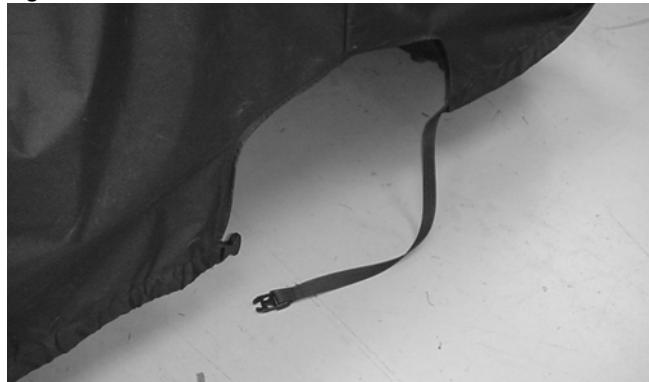

ROV-062

4. Disconnect the ratchet from the velcro on the cover. At rear of vehicle, thread webbing at the bottom of the cover through the loop of the vertical hanging strap and thread into ratchet. See Fig. 2.

Fig. 2

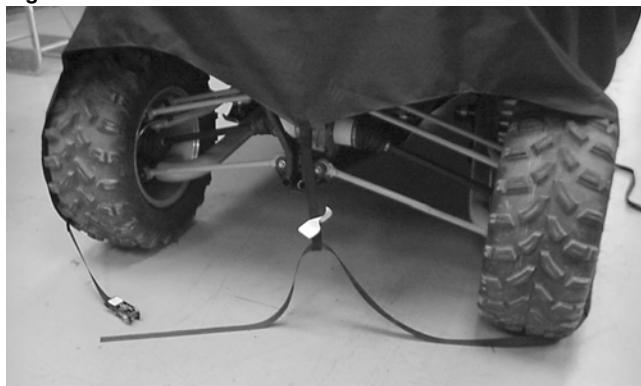

ROV-064

5. Pull webbing tightly by hand; then adjust cover by pulling around the bottom. Ensure cover is tight around the base of the vehicles tires. Pull the webbing strap by hand again.
6. Attach both buckles on the center straps to the buckles sewn to the cover; then feed the webbing underneath the machine and connect the buckles on the opposite side. Cinch tight by pulling any excess slack underneath the vehicle.

Fig. 3



ROV-063