


# Arctic Cat® Wildcat

## Installation Instructions - Accessory Kit

### Trunknet Kit

(p/n 1436-723)

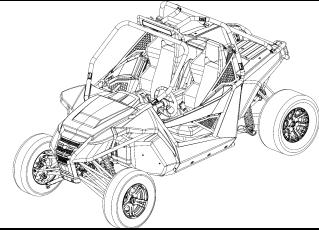

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


#### Application: 2012 Wildcat

##### Kit includes:

p/n	QTY	DESCRIPTION
N/A 0453-773	1	Net Instructions

1. Remove both seats; then remove the torx-head screws shown below. Install the buckle straps to the vehicle using the existing torx-head screws. Tighten securely. See Fig. 1.

Fig. 1

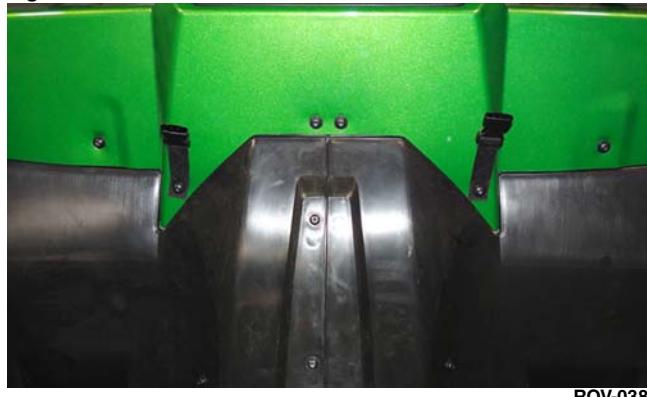

ROV-038

2. Drape Net over the rear ROPS tube and loosely secure the buckles around the tube. See Fig. 2.

Fig. 2



ROV-039

3. Secure the side buckles around the side ROPS tubes and under the seat belt bracket. See Fig. 3.

Fig. 3



ROV-040

4. Secure the bottom side buckles around the side ROPS tubes and under the side net brackets. See Fig. 4.

Fig. 4



ROV-041

5. Install both seats and pull each strap tight.

