


Arctic Cat® Wildcat 4

Installation Instructions - Service Parts

Wildcat 4 Front Brake Pad Kit

(p/n 2502-034)

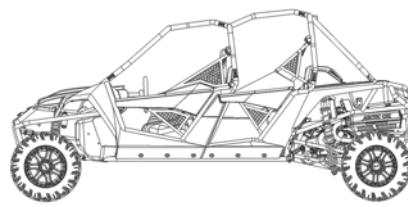

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

p/n	QTY	DESCRIPTION
2402-105	2	Front Brake Pad
0453-891	1	Instructions

■ **NOTE:** The brake pads should be replaced as a set.

1. Remove a front wheel.
2. Remove the E-clips from the inboard end of the caliper anchor bolts; then remove the anchor screws from the knuckle. See fig. 1.

Fig. 1

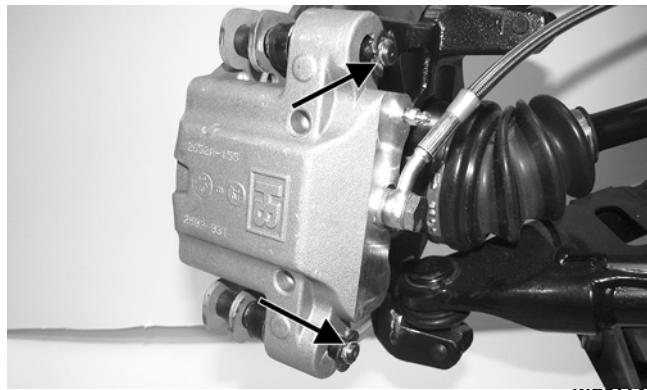

WC611A

3. Remove the caliper and pads from the vehicle. See Fig. 2.

Fig. 2



WC610

■ **NOTE:** It will be necessary to retract the pistons to accommodate the new pads. It may be necessary to open the bleed screw slightly.

4. Install the new Front Brake Pads; then secure the caliper and pads to the knuckle with the anchor screws. Tighten to 35 ft-lb and install the E-clips.

■ **NOTE:** Apply a small amount of grease to the ends of the anchor screws before installing through the caliper.

5. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 80 ft-lb.
6. Burnish the brake pads according to the Arctic Cat Wildcat 4 Service Manual.

WARNING

Failure to properly burnish the new brake pads could lead to premature brake pad wear or brake loss. Brake loss can result in severe injury.

