


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Wildcat 4 Knee Pad Kit

(p/n 1436-840)

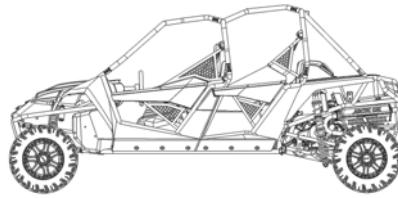

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat 4

Kit includes:

p/n	QTY	DESCRIPTION
N/A	2	Knee Pad
0453-886	1	Instructions

1. Open the rear right door; then remove the torx-head screw securing the side panel to the frame. See Fig. 1.

Fig. 1



ROV-236A

2. Secure Knee Pad around the vertical tube making sure the top velcro is secured on top of the horizontal frame tube (A). See Fig. 2.

Fig. 2



ROV-235A

3. Install the torx-head screw; then repeat for the opposite side.

