


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Wildcat Hard Top Stereo Kit

(p/n 1436-636/838)

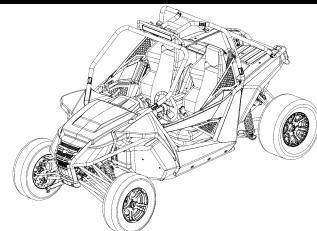

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
0430-114	1	Radio
1436-106	1	Antenna Kit
1436-666	2	Speaker (pair - 4 inch)
0430-108	1	Jumper Harness
0486-285	1	Main Harness
0423-609	1	Machine Screw (Strap Mount)
8427-605	1	Nut
0609-791	16	Self-Tapping Screw
0453-826	1	Instructions

1. Remove the Roof from the vehicle (if needed).
2. Using the Speaker manufacture's instructions, cut out each cardboard template and place it in the center of each speaker boss; then cut each hole using an appropriate tool. See Fig. 1.

Fig. 1



ROV-188

3. Follow the Antenna manufacturer's instructions for installing the antenna. Arctic Cat recommends installing the antenna in location shown below. See Fig. 2.

Fig. 2



ROV-195

4. Remove the stereo din sleeve from Stereo, then using a white marker, mark the Hard Top (p/n 1436-753) using the stereo din sleeve as a template. **Make sure the area marked is not larger than the sleeve or the sleeve will not fit properly.** See Fig. 3.

Fig. 3



ROV-189

5. Using a suitable tool, cut along the marked area.
6. Using a suitable tool, remove enough area in the bottom middle rear portion of the stereo din sleeve. Insert Stereo Strap through the sleeve and bend approximately 1/2-in. around the sleeve. See Fig. 4.

Fig. 4



UTV-315A

7. Locate the center mounting location (A); then using a 1/4-in. drill bit, drill a hole aligned with the center mounting location. See Fig. 5.

Fig. 5




ROV-192A

8. Follow the stereo manufacturer's instructions for installing the stereo din sleeve. Make sure all tabs are bent so the sleeve is secured to the hard top.
9. Secure the back of the stereo by installing Strap Mount Machine Screw through the hole in the roof (drill in step 7) and through the closest hole in the stereo strap and secure using a Nut. Tighten until snug.

■ NOTE: Before installing the speakers, be sure to drill a 1/2-in. hole in the rear right-side corner so the accessory plug can be routed through. See Fig. 6.

Fig. 6

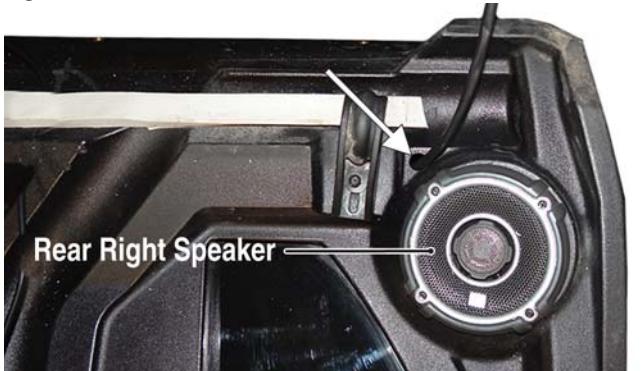

ROV-190A

■ NOTE: A fish tape or a flexible wire will aid in the routing of speaker wires and the antenna wire.

10. Route the Harness to each speaker location; then position the speakers and pre-drill each hole using a 1/8-in. drill bit. Secure using Self-Tapping Screws. See Fig. 4.

Fig. 4



ROV-191

11. Connect Jumper Harness to the main harness; then connect the Harness to the back of the stereo; and insert the stereo until it is fully seated. See Fig. 8 and 9.

Fig. 8



ROV-193

Fig. 9



ROV-194

12. Route the accessory plug down along the canopy tube and towards the accessory plug (located behind the dash on 2012 Wildcat Models. Some 2013 models will have the plug near the battery. See note below). Secure with cable ties.

■ NOTE: An Accessory Extension Wire Harness (p/n 1436-643) is required on some models but not included in this kit and will have to be ordered separately. The accessory plug is under the dash near the back of the gauge and route toward the battery making sure wires are cable tied away from the drive shaft.