


Arctic Cat® Wildcat

Installation Instructions - Service Parts

Wildcat Rear Brake Pad Kit

(p/n 1436-811)

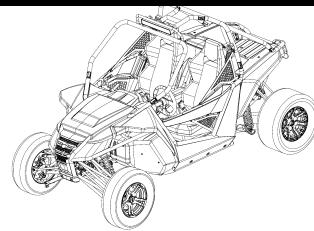

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
1436-420	1	Brake Pad Set
8408-831	2	Cap Screw (M8 x 1.25 x 30)
0453-850	1	Instructions

■ **NOTE:** When installing this kit, it is very important to use the new Cap Screws included in the kit.

CAUTION

Do not reuse existing Cap Screws. Discard these cap screws whenever the above mentioned kit is installed or whenever the brake caliper is removed for service work.

1. Secure the vehicle on a support stand to elevate the wheel; then remove the wheel.
2. Remove the cap screws securing the caliper holder to the knuckle; then remove the pads from the caliper. Discard pads and cap screws.
3. Install new Brake Pads.

4. Secure the caliper holder to the knuckle with new Cap Screws (M8 x 1.25 x 30). Tighten to 20 ft-lb.
5. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 80 ft-lb.
6. Burnish the brake pads according to steps 7-9.

WARNING

Failure to properly burnish the brake pads could lead to premature brake pad wear or brake loss. Brake loss can result in severe injury.

7. Choose an area large enough to safely accelerate the vehicle to 30 mph and to brake to a stop.
8. Accelerate to 30 mph; then depress the brake pedal to decelerate to 0-5 mph.
9. Repeat procedure 20 times until brake pads are burnished.

