


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Windscreen Windshield Kit (p/n 1436-826)

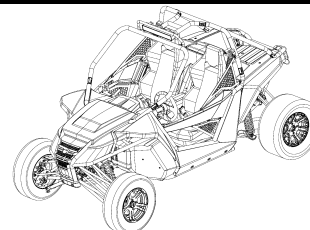


■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat and Wildcat 4

Kit includes:


Ref. No.	p/n	QTY	DESCRIPTION
1	*	2	Button Screw
2	*	2	Lock Washer
3	*	2	Fender Washer
4	*	2	Rubber Washer
5	N/A	1	Windscreen Windshield
6	0541-890	2	Dash Trim
7	0541-021	2	Clamp
N/A	0453-854	1	Instruction

* Included in Hardware Kit (p/n 1436-773)

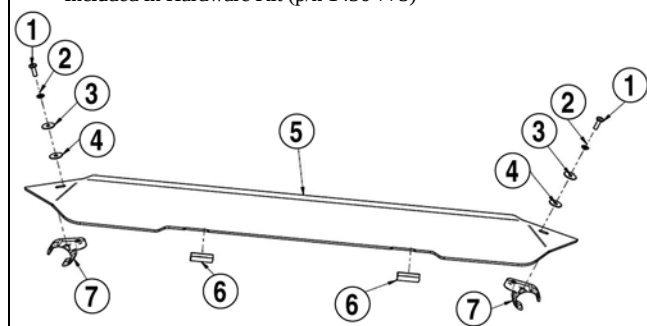

1. Remove all plastic film from Windscreen Windshield.
2. Apply Dash Trim to the bottom of windscreen windshield. See Fig. 1.


Fig. 1

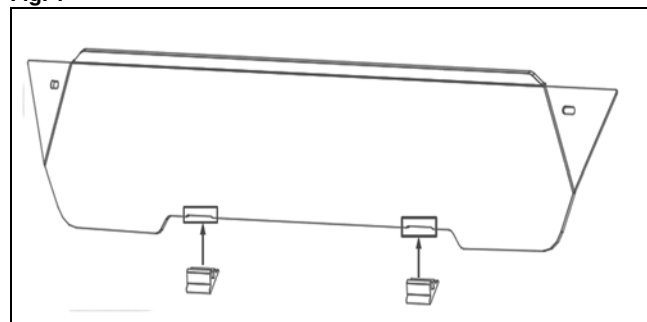

ROV-272

3. Install Clamp onto the frame approximately 4-4.50 inches below where the ROPS attaches to the frame; then repeat for opposite side. See Fig. 2.


Fig. 2

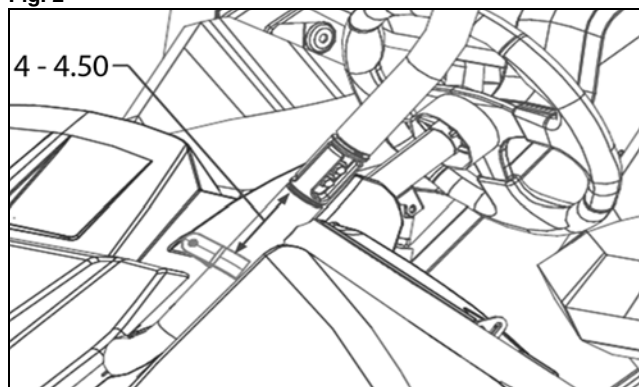

ROV-195

4. Secure windshield to both clamps using two Button Screws, two Fender Washers, and two Rubber Washers. Tighten securely See Fig. 3.

Fig. 3

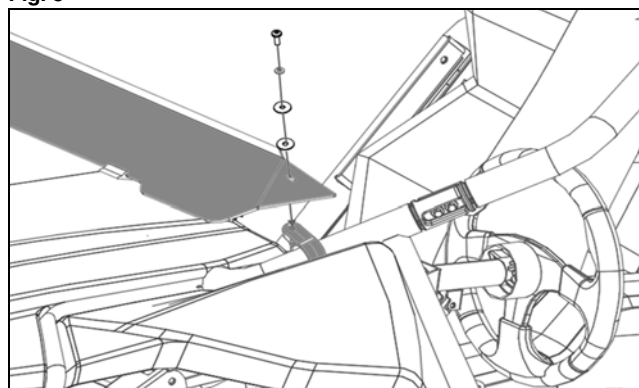

ROV-274

