


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Winch Carrier for Winch Mount Kit

(p/n 1436-693)

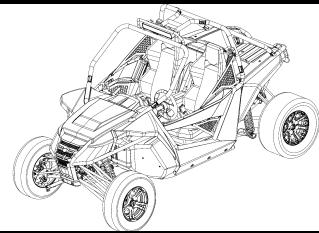


■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:

Ref. No.	p/n	QTY	DESCRIPTION
1	*	1	Clevis Pin
2	*	1	Carrier Pin
3	N/A	1	Winch Carrier
N/A 0453-854 1 Instruction			

* Included in Pin Kit (p/n 0541-076)

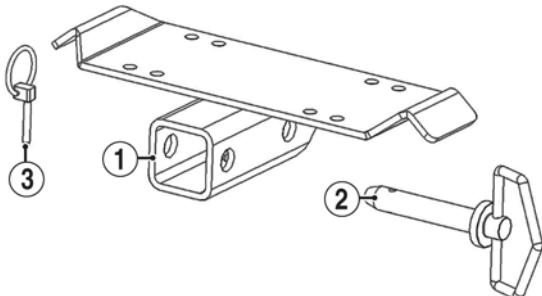


■ NOTE: This winch carrier works with Front Winch Mount Kit (p/n 1436-692) or Rear Winch Receiver Kit (p/n 1436-471).

CAUTION

Never operate the vehicle with winch carrier installed in the rear receiver. Damage to the vehicle or winch may occur.

1. Using the four cap screws provided with the winch kit, secure the Winch assembly to Winch Carrier making sure to use the exterior holes for a 4000 lb winch and the interior holes for a 3000 lb winch. See Fig. 1.


Fig. 1

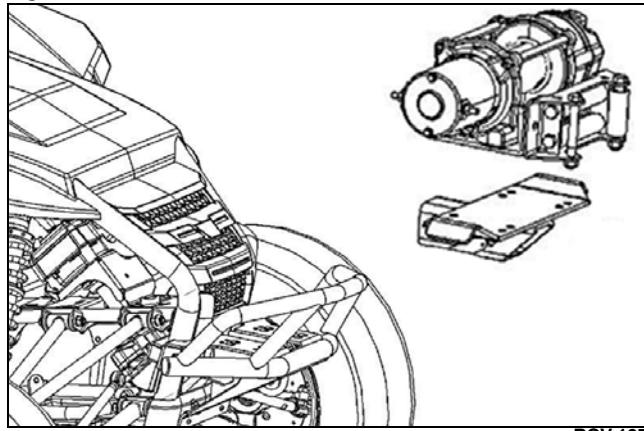

ROV-197

2. Position the winch carrier w/ winch onto the top of the winch mount; then line up the hole in the winch mount with the hole in the winch carrier and secure using Carrier Pin and Clevis Pin. See Fig. 2.


Fig. 2

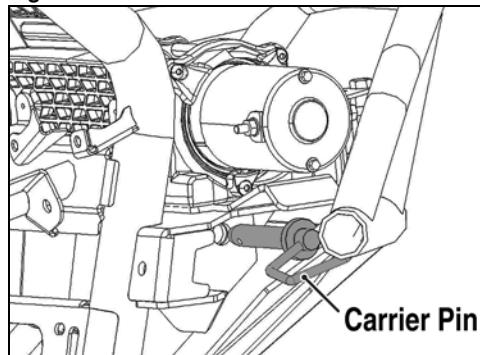

ROV-211A

3. To use with Rear Winch Receiver (p/n 1436-741), install the winch carrier into the receiver and secure using carrier pin and pin. See Fig. 3.

Fig. 3

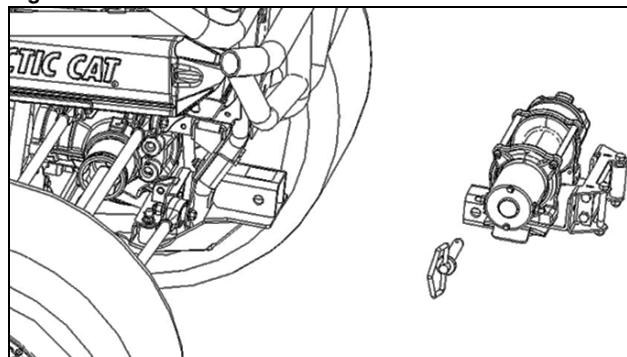

ROV-209